


IS RNS 165[®]

Manuel d'utilisation / User Manual / Gebrauchsanleitung / Manuale d'uso / Manual de uso /
Manual de utilização / Handleiding / Руководство по эксплуатации /
使用手册 / 사용 설명서 / 取扱説明書 / دليل المستخدم

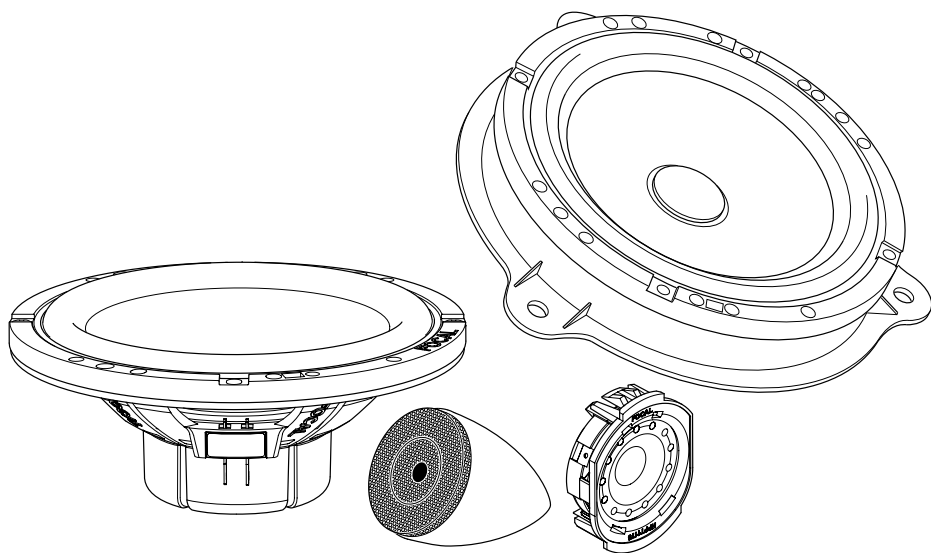

IS RNS 165[®]

Manuel d'utilisation / User manual






IS RNS 165	
Woofer	165 mm
Diamètre bobine	32 mm
Membrane	Polyglass
Moteur	45 mm
Impédance nominale	4 Ω
Tweeter	Tweeter à dome inversé en aluminium/magnésium
Filtre	12 dB/oct
Puissance max.	120 W
Puissance nom.	60 W
Sensibilité (2,83 V/1 m)	92,7 dB
Réponse en fréquence	60 Hz - 28 kHz
Accessoires	Livré avec accessoires de montage, vis, supports.

IS RNS 165	
Woofer	165mm
Voice coil diameter	32mm
Cone	Polyglass
Magnet	45mm
Nominal impedance	4Ω
Tweeter	Aluminum/magnesium inverted dome tweeter
Crossover	12dB/oct
Max. power	120W
Nom. power	60W
Sensitivity (2.83V/1m)	92.7dB
Frequency response	60Hz - 28kHz
Accessories	Supplied with mounting accessories, screws, brackets.

IS RNS 165®

Manuel d'utilisation / User manual



7

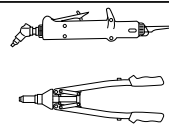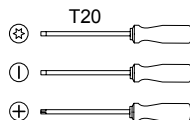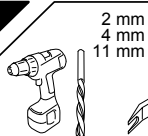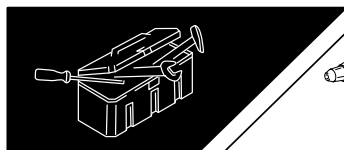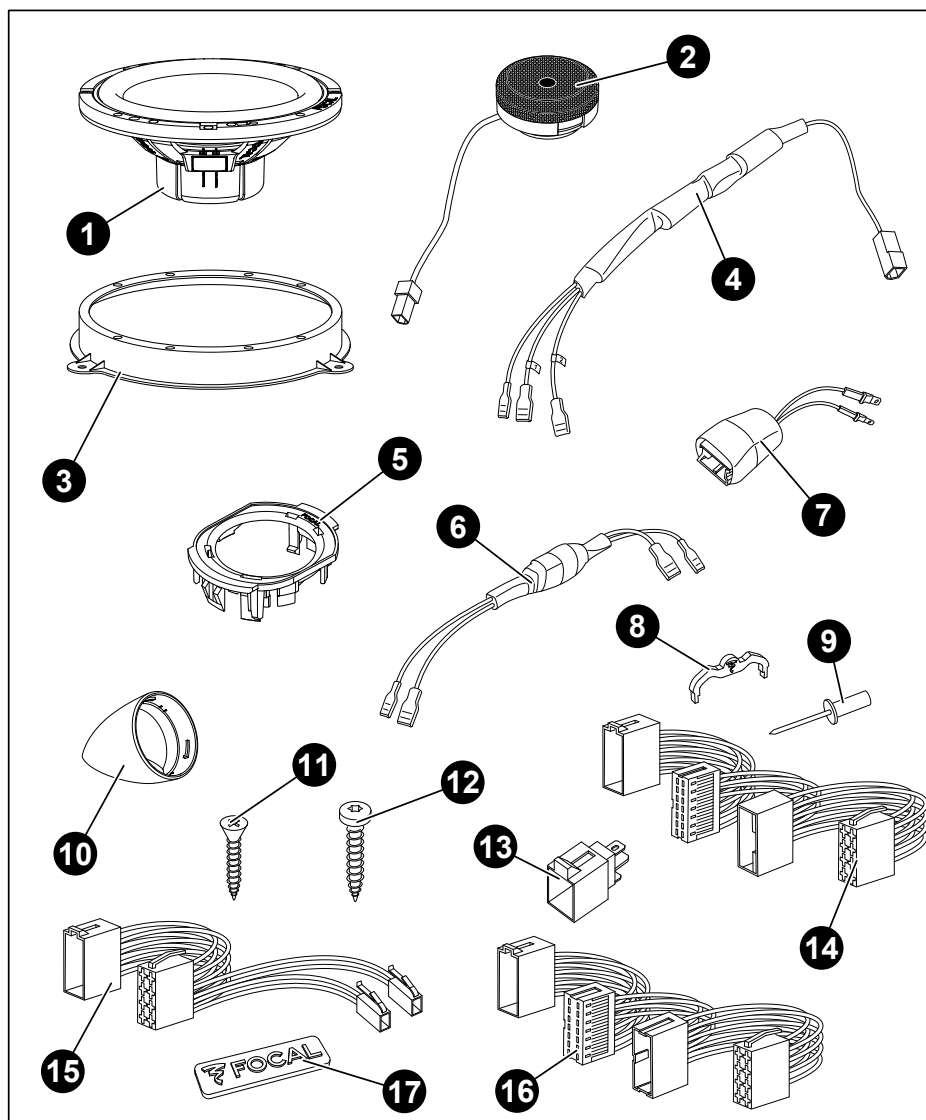

IS RNS 165®

Manuel d'utilisation / User manual


8

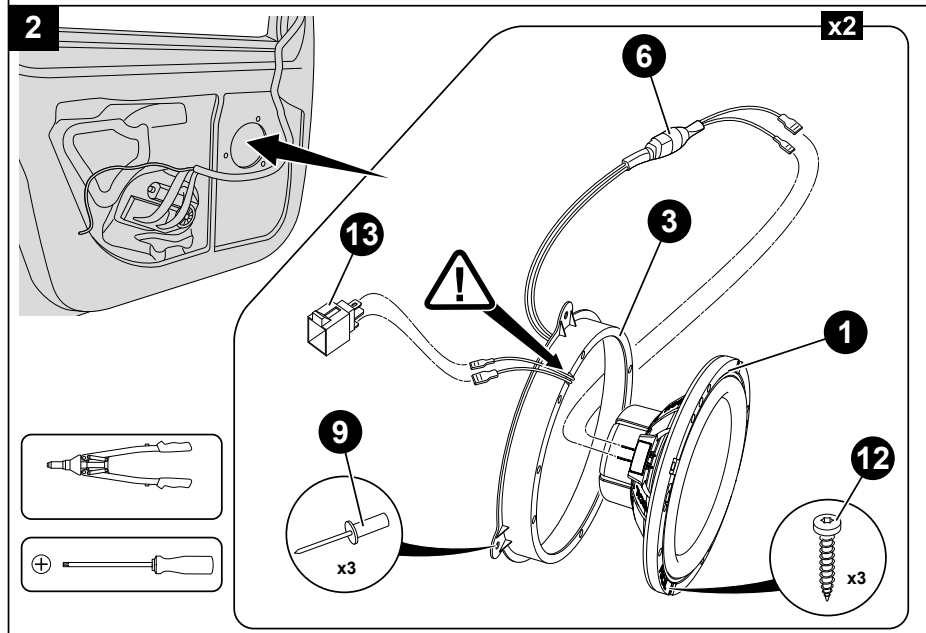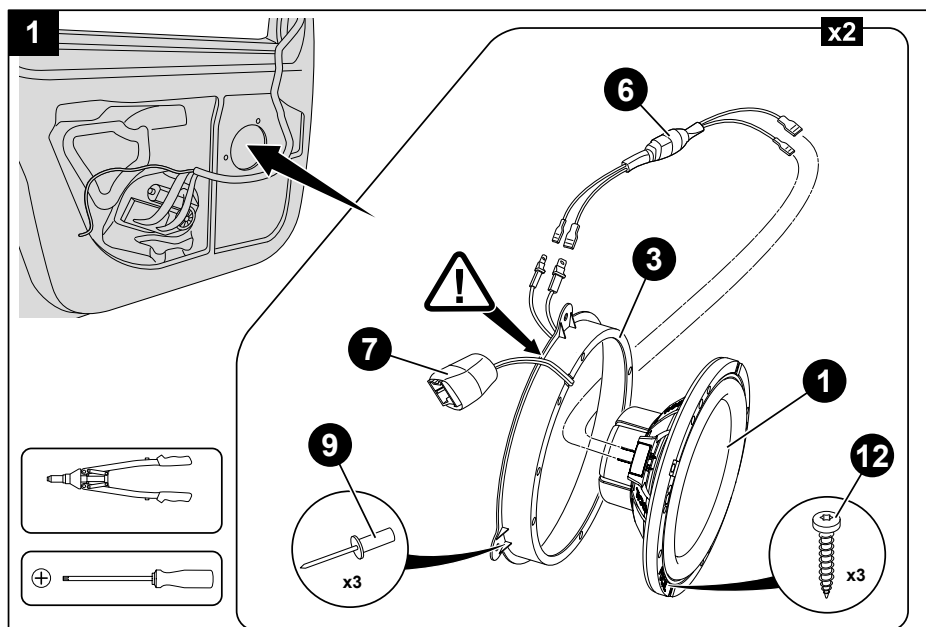

IS RNS 165[®]

Manuel d'utilisation / User manual


9

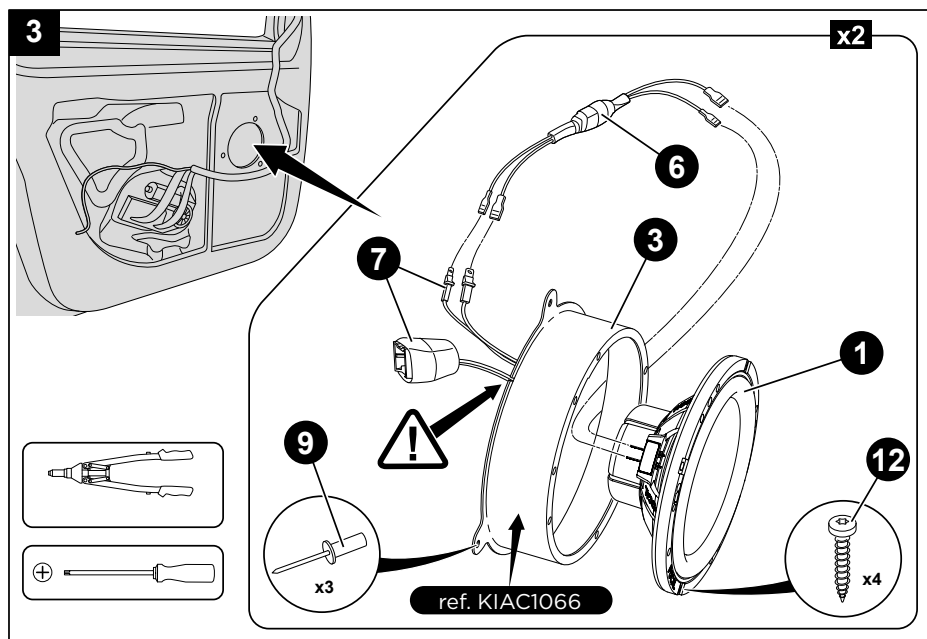

IS RNS 165®


Manuel d'utilisation / User manual

10

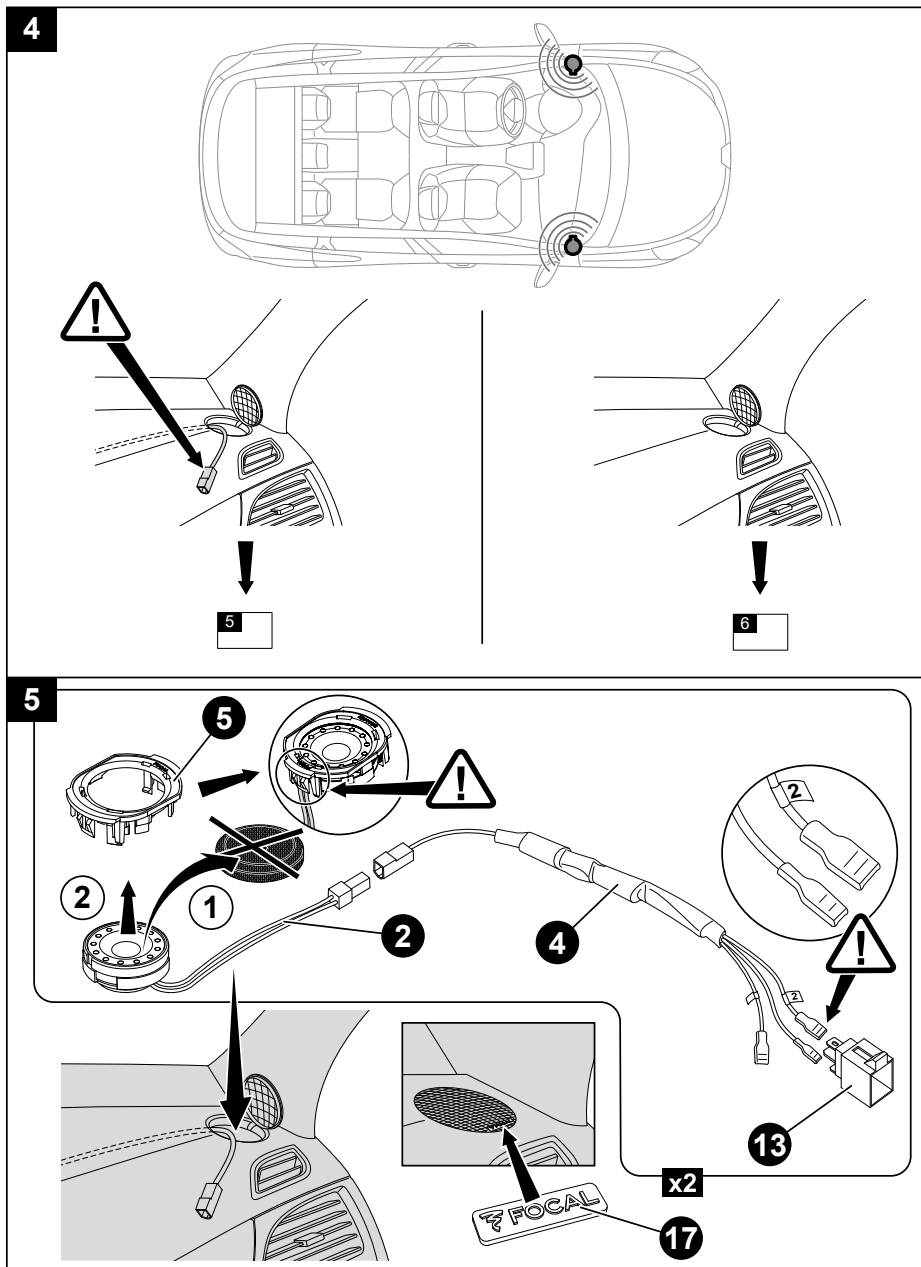

IS RNS 165®


Manuel d'utilisation / User manual

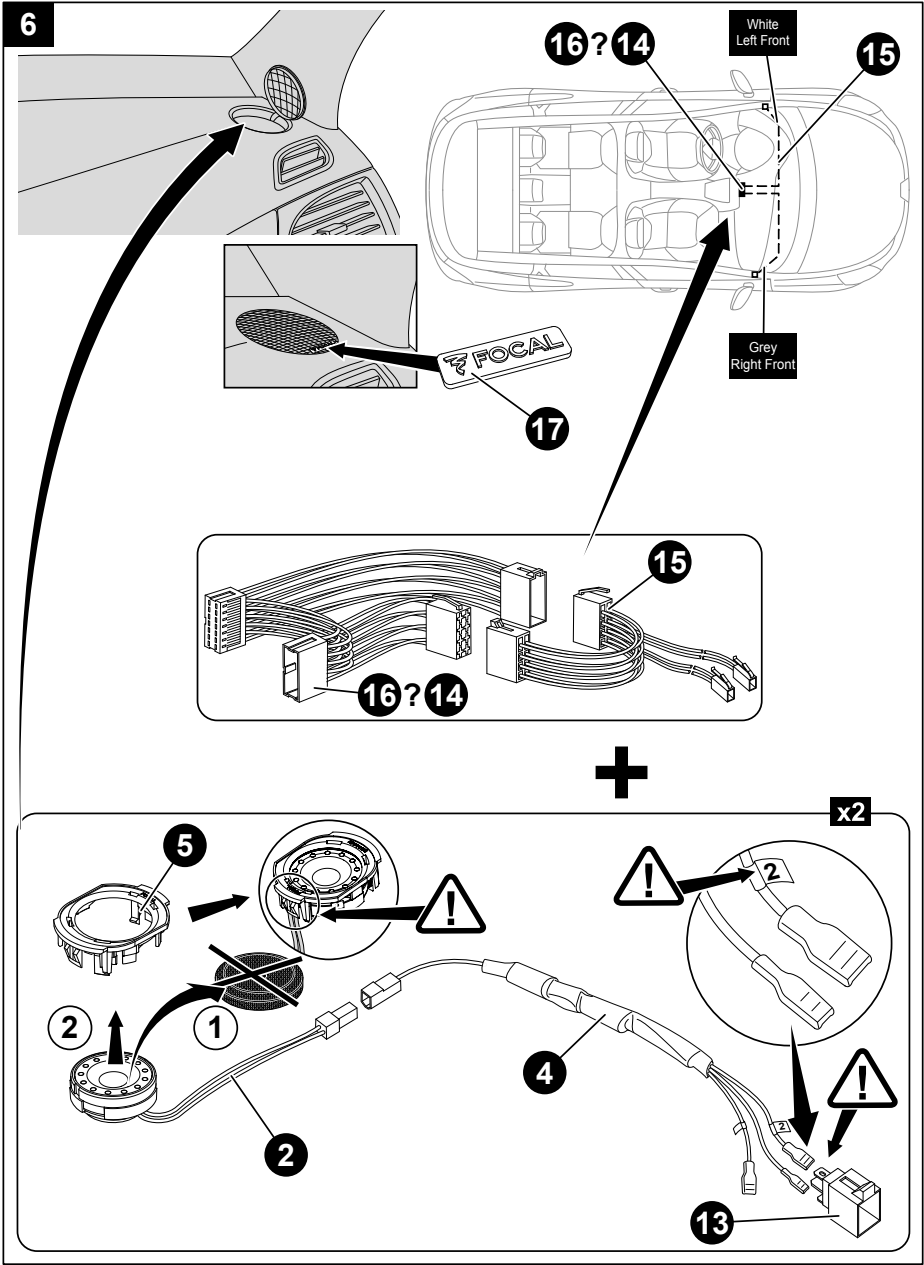

IS RNS 165®

Manuel d'utilisation / User manual


12

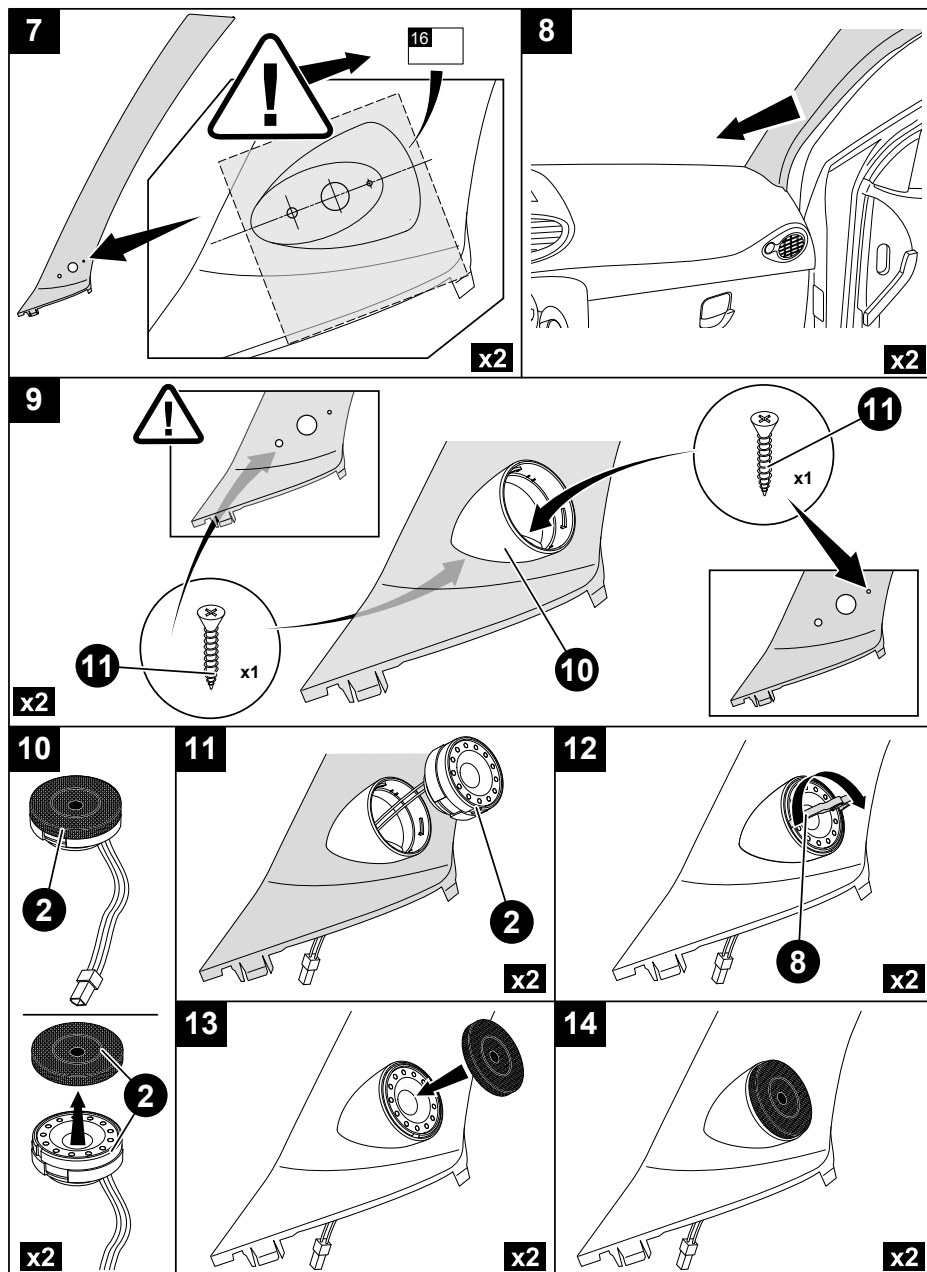



IS RNS 165®

Manuel d'utilisation / User manual

13

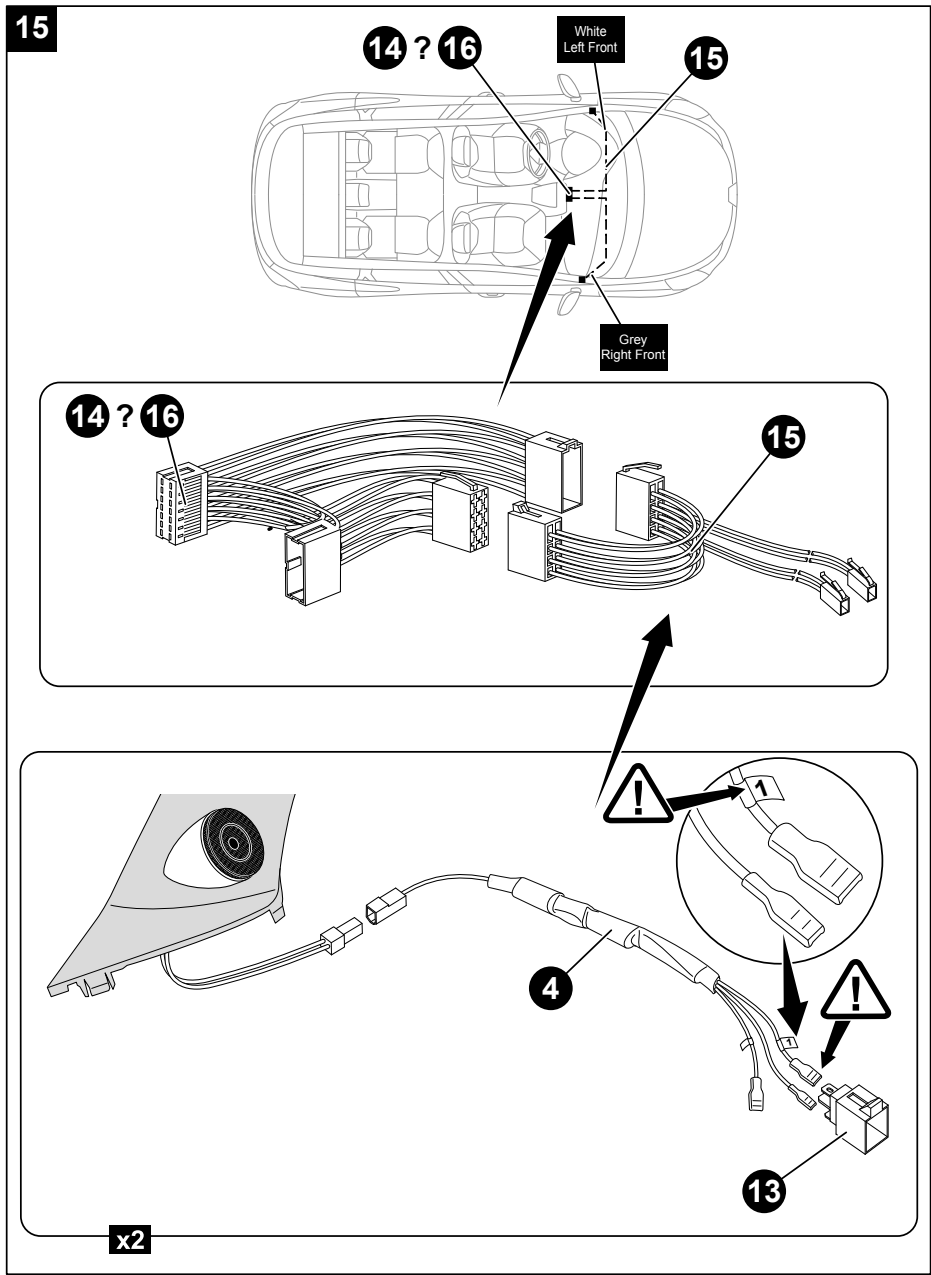

16

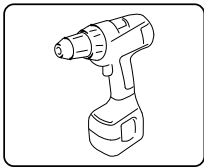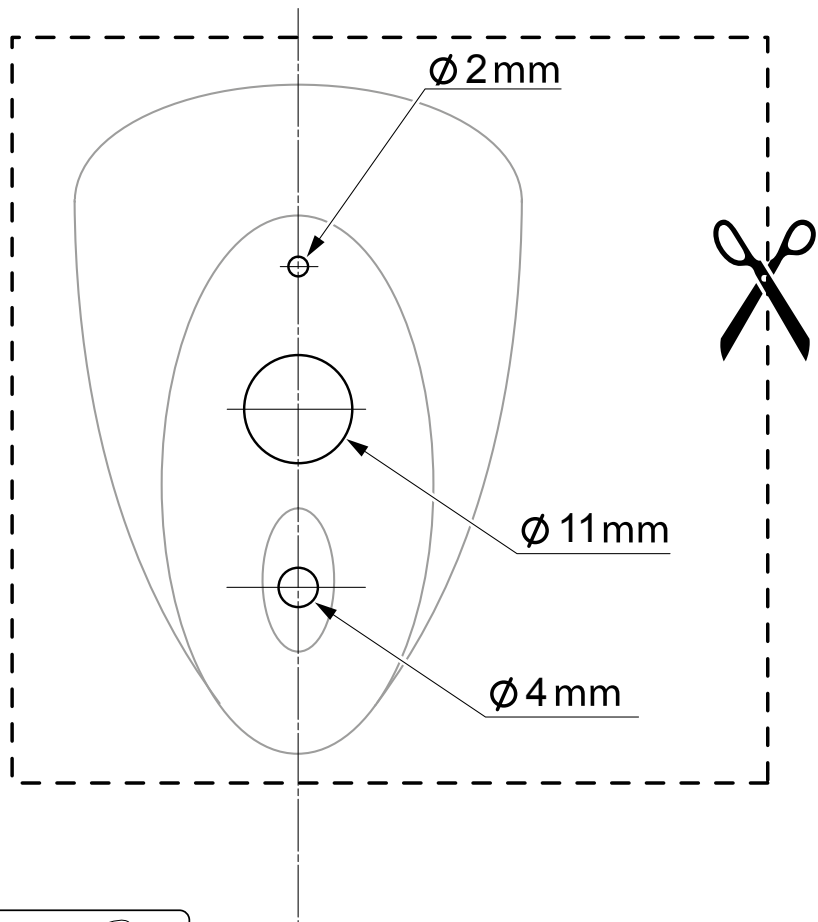



UK
CA Aamp
25B
GU35 9QE



PAP

Raccolta differenziata.
Verifica le disposizioni
del tuo Comune.



FR



ET



Cet appareil
se recycle

REPRISE
À LA LIVRAISON



OU

À DÉPOSER
EN MAGASIN



OU

À DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedemesdechets.fr



Scansionare il codice QR per
informazioni sullo smaltimento
degli imballaggi

Scan QR code for information
on packaging disposal