 


MBZ v2

IS MBZ 100 v2 | IC MBZ 100 v2





ISUB MBZ 2 LHD v2 | ISUB MBZ 2 RHD v2

Manuel d'utilisation / User Manual / Gebrauchsanleitung /
Manuale d'uso / Manual de uso / Manual de utilização /
Handleiding / Instrukcja obsługi / Руководство по
эксплуатации / 使用手册 / 사용 설명서 /
取扱説明書 / دليل المستخدم

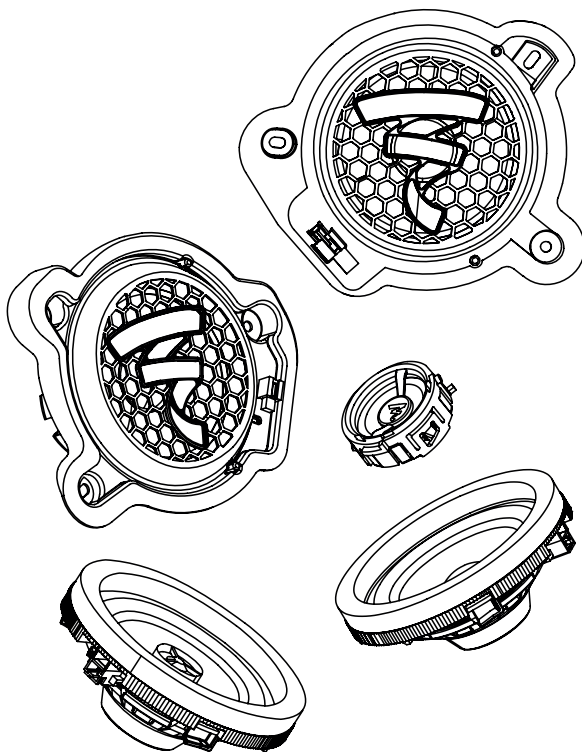



MBZ v2

    Manuel d'utilisation / User manual

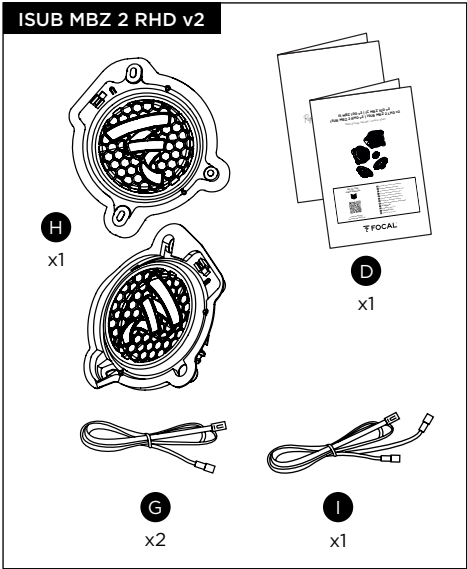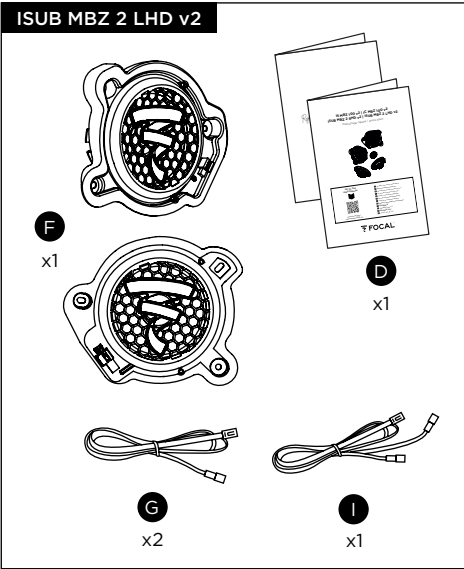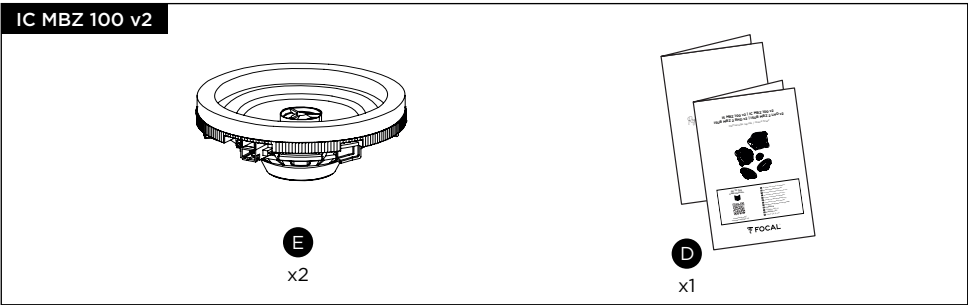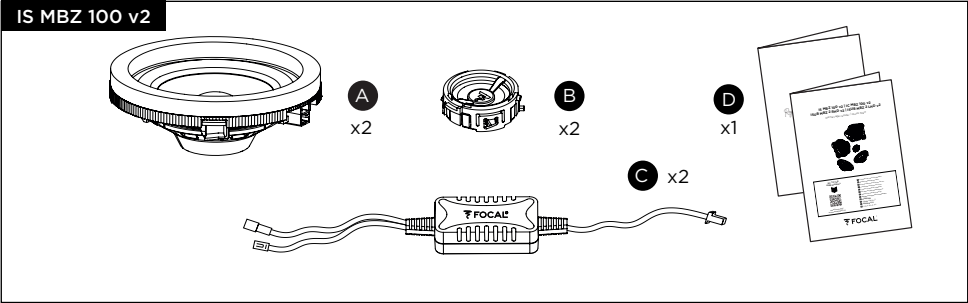






MBZ v2

  Manuel d'utilisation / User manual

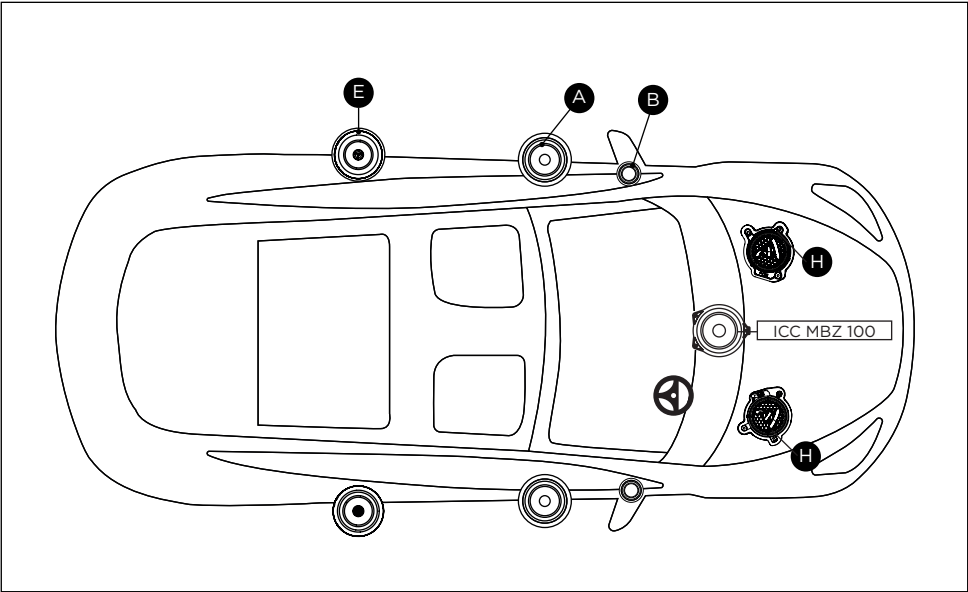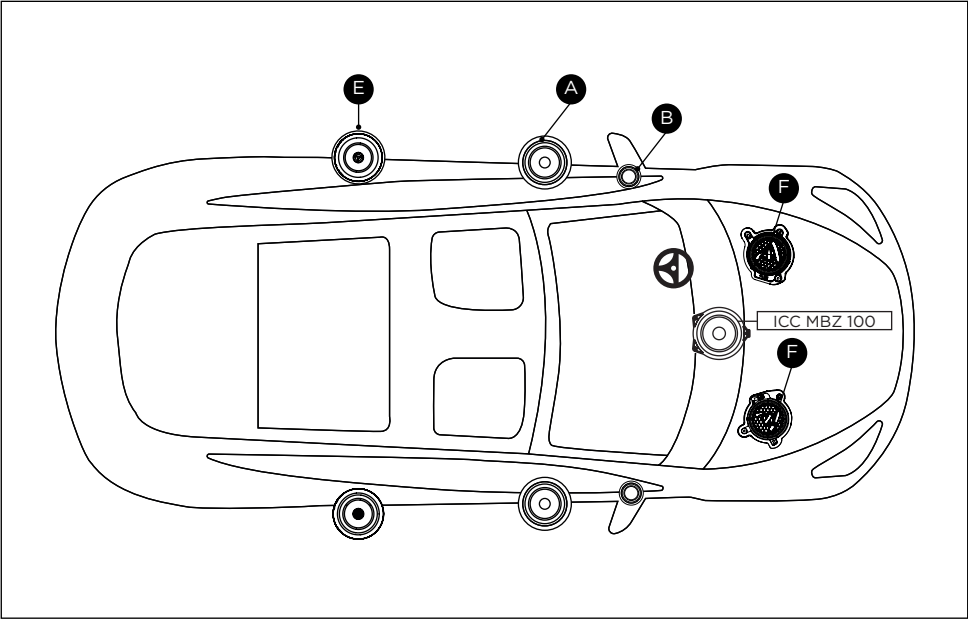







MBZ v2

     Manuel d'utilisation / User manual

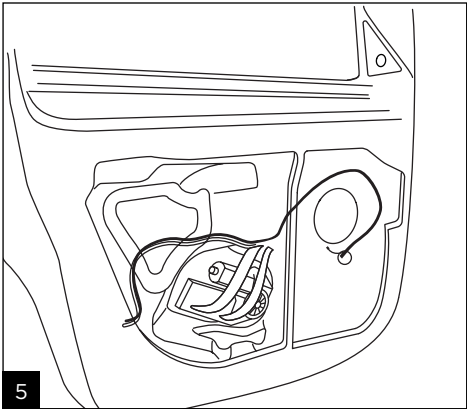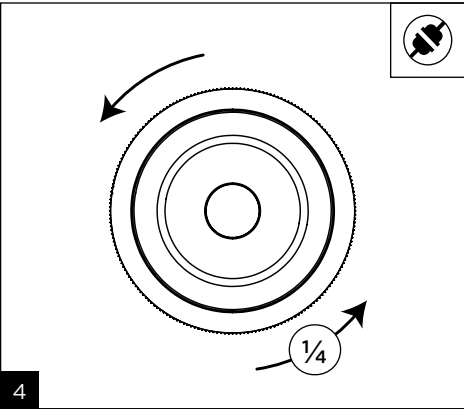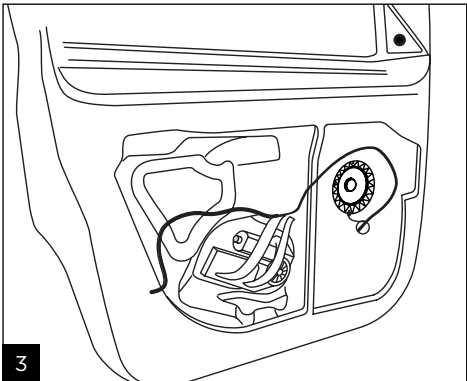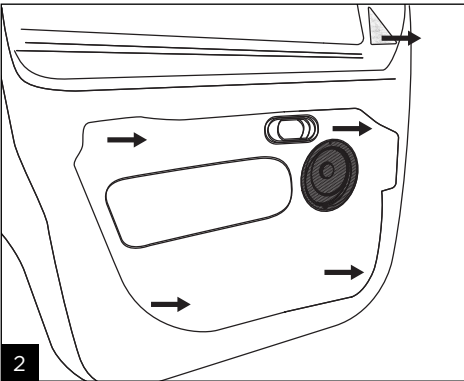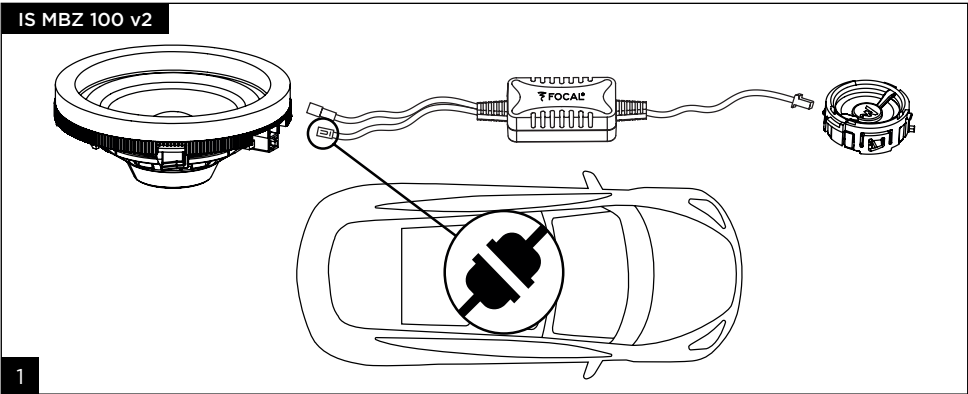







MBZ v2

      Manuel d'utilisation / User manual

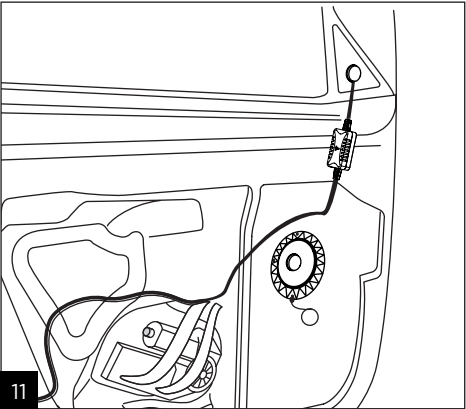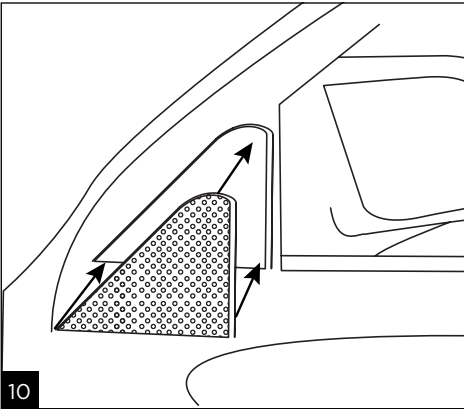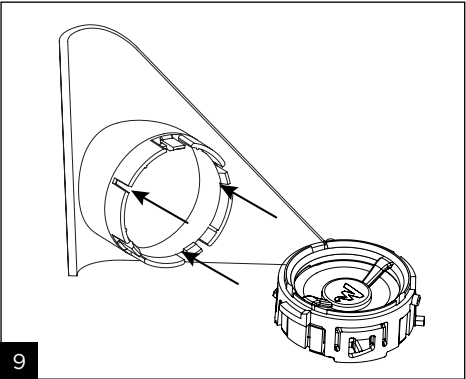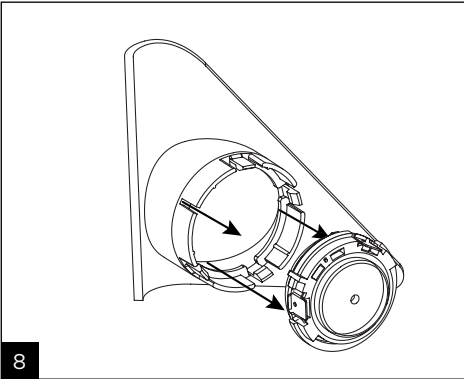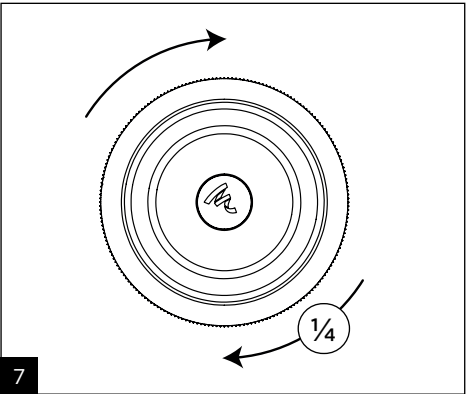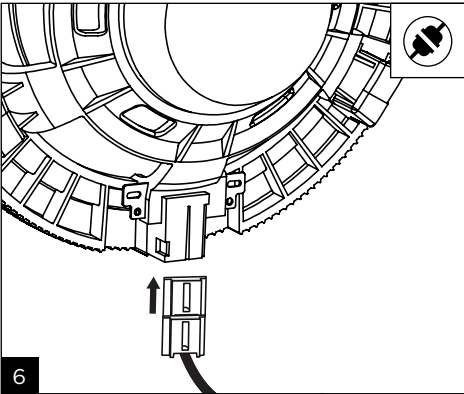






MBZ v2

      Manuel d'utilisation / User manual

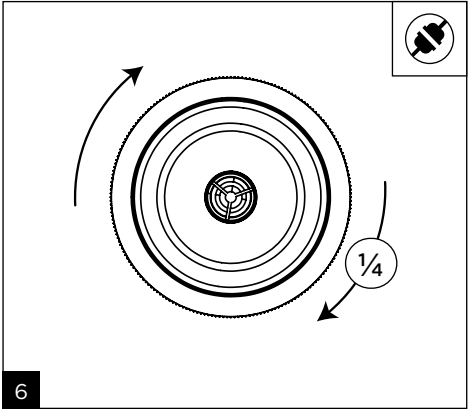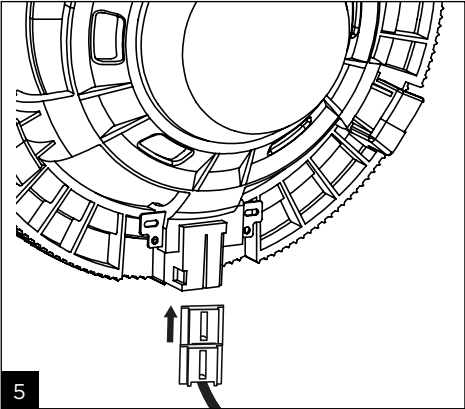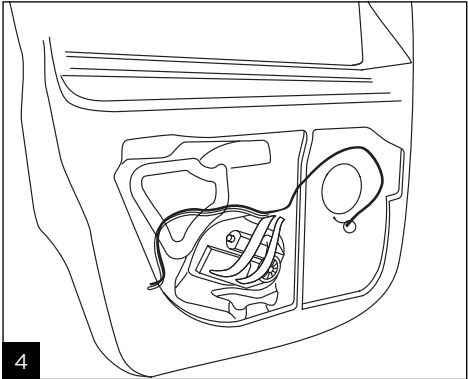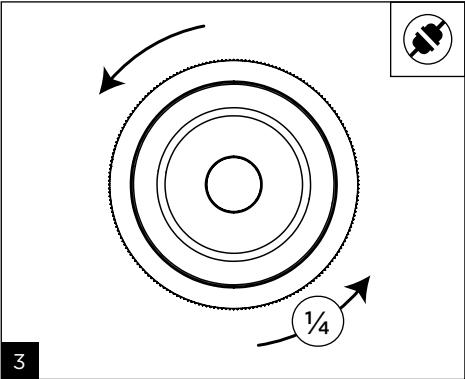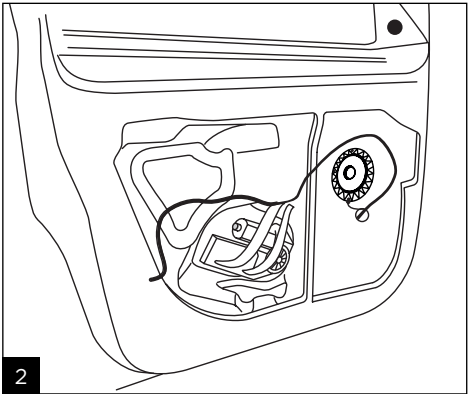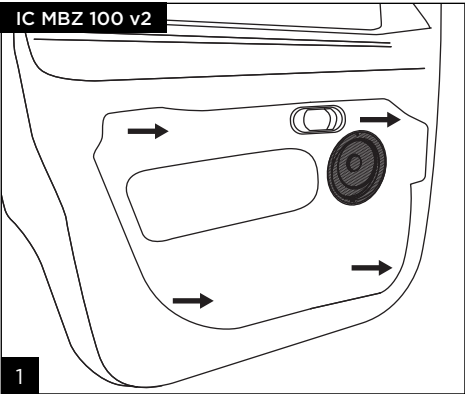







MBZ v2

     Manuel d'utilisation / User manual

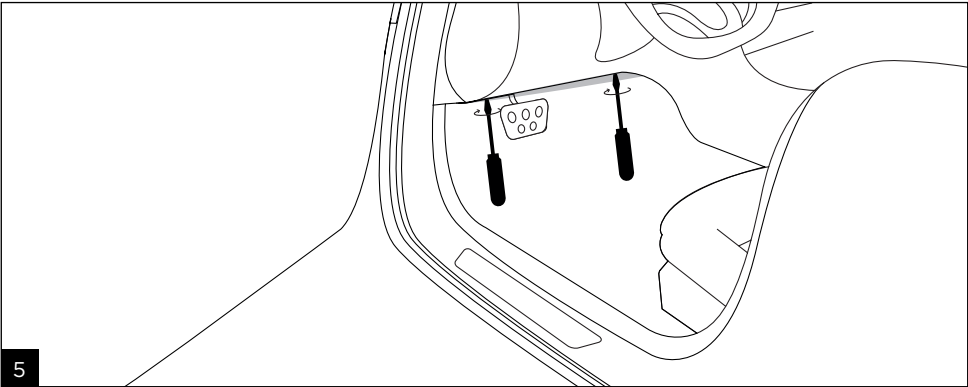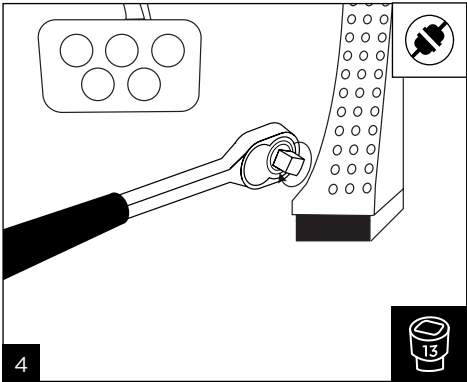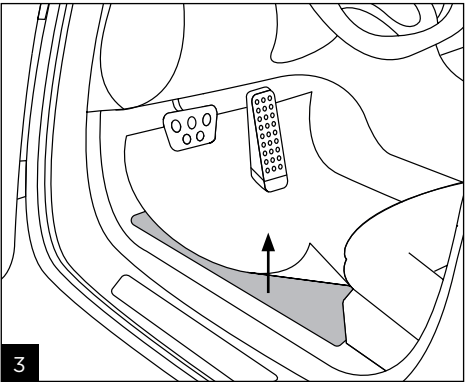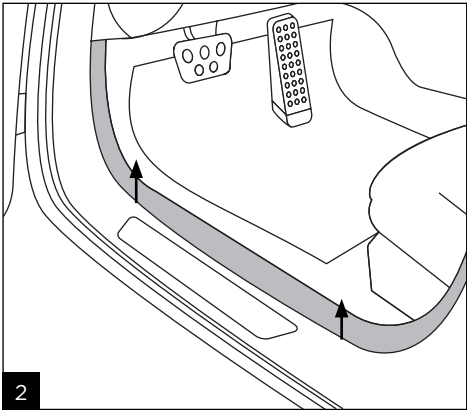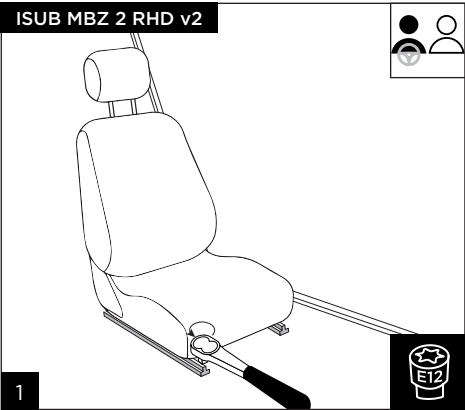

MBZ v2

      Manuel d'utilisation / User manual

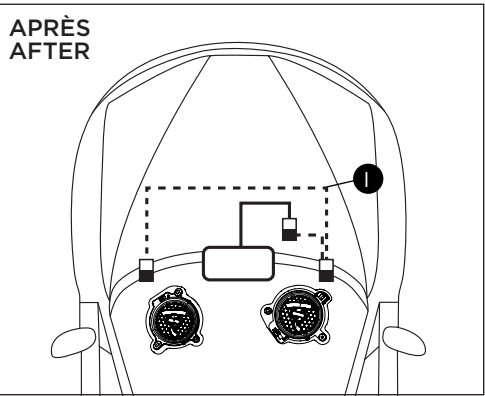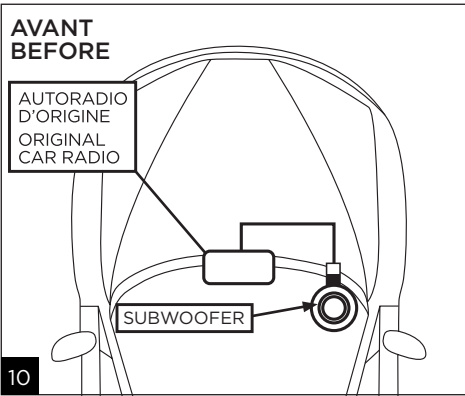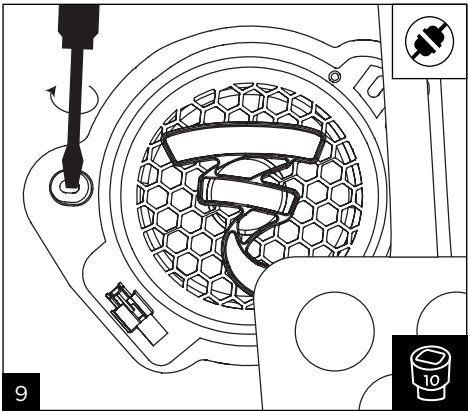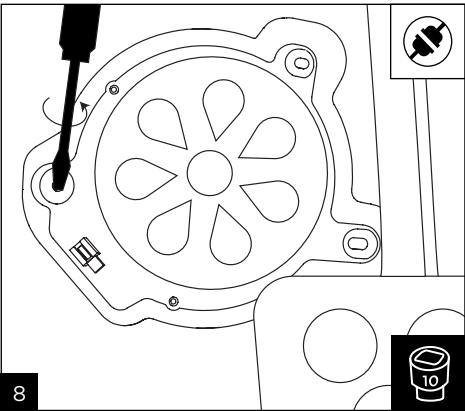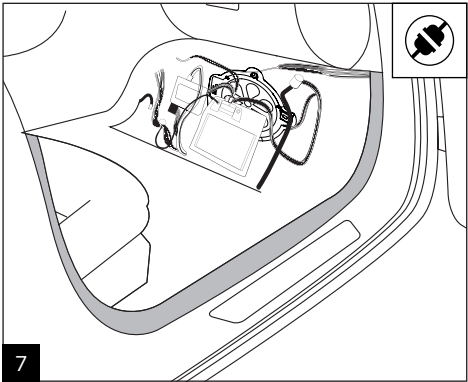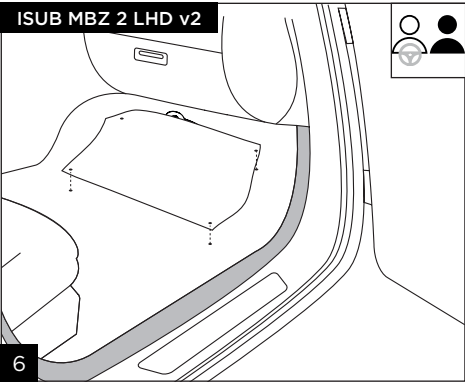

MBZ v2

Caractéristiques / Specifications

	IS MBZ 100 v2	IC MBZ 100 v2
Type	2-way component kit	2-way coaxial kit
Maximum power	100W	80W
Nominal power	50W RMS	40W RMS
Sensitivity (2,83V/1m)	87dB	88dB
Frequency response	150Hz - 20kHz	150Hz - 20kHz
Impedance	4Ω	4Ω
Midrange	4" (100mm)	4" (100mm)
Tweeter	Aluminium inverted dome tweeter	Aluminium inverted dome tweeter
Cone	Flax	Flax
Voice-coil diameter	1" (25mm)	1" (25mm)
Voice-coil height	5/16" (8mm)	5/16" (8mm)
Magnet	Neodymium	Neodymium
Surround	Butyl	Butyl
Crossover	Woofer: in-line box Tweeter: in-line	Integrated

ISUB MBZ 2 LHD v2/ISUB MBZ 2 RHD v2	
Type	Subwoofers kit
Maximum power	150W x2
Nominal power	75W RMS x2
Sensitivity (2,83V/1m)	93.3dB
Impedance	2Ω
Subwoofer	8" (200mm)
Cone	Polyglass
Voice-coil diameter	1 ^{3/8} " (35mm)
Voice-coil height	1/2" (13mm)
Magnet	Neodymium
Surround	Butyl

MBZ v2

User manual

16

EN

To facilitate the Focal-JMLab warranty,
it is now possible to register your product online at: www.focal.com/warranty



Thank you for purchasing a Focal product. Welcome to our High-Fidelity world. Innovation, tradition, excellence and pleasure are our values; our one and only aim is to bring you a sound that is rich, pure and true. To get the most out of your product, we recommend that you read the instructions in this booklet, then store it in a safe place to refer to in the future.

For your safety, follow the assembly instructions provided in this user manual.

Equipment required

T20			E12	
T30			10mm/14mm	

Important recommendations

This speaker driver has been designed to be fitted in the factory location. Check that there is sufficient space between the speaker driver and the protective grille.

- Keep the speaker driver clear of any metal shavings and dust particles during the cutting process.
- Clean thoroughly before fitting the speaker driver.
- Ensure that there is nothing covering the grille, as this could damage the speaker driver.
- For the electrical disconnection, use the connector. Do not pull on the wires.
- Unclipping and reclipping the various parts must be done carefully.
- Excessive force may damage them.

Product positioning

The speaker driver has been designed to deliver the most faithful sound reproduction for any style of music. Nonetheless, a few simple rules should be followed to optimise their performance and to guarantee good tonal balance and a realistic sound image. We recommend placing the speaker drivers from the kit in the dedicated OEM locations.

Installation

1. Identify the location of the speaker driver within the vehicle.
2. Carefully disconnect and disassemble the original speaker driver.
3. Fit the Focal speaker driver into the vehicle's factory locations then connect it.

Installation details may vary depending on the model. We recommend watching our online assembly tutorials. To improve the performance of your system and eliminate parasitic sounds, we advise you to use the Focal B.A.M. acoustic insulation kit. Focal.

SPECIAL PRECAUTIONS

Door trims

Once the door trim has been removed, be sure to place it on a protective surface to avoid damaging it or the cables.

Maintenance

To look after the speaker drivers, simply dust using a dry cloth. If the grille is marked, use a damp cloth. Never use solvents, detergents, alcohol or corrosive products, scrapers or scouring utensils to clean the surface of the speaker drivers.

MBZ v2

User manual

17

EN

Running-in period

The speaker drivers are complex mechanical components that require a running-in period to operate at their best. This running-in period varies depending on the conditions in question and may take several weeks. To reduce this time, we recommend operating the speaker drivers for about twenty hours at a moderate volume. Once the speaker drivers' characteristics have fully stabilised, you will be able to enjoy the performance of your products to the fullest.

Warranty terms and conditions

All Focal loudspeakers are covered by warranty drawn up by the official Focal distributor in your country. Your distributor can provide all details concerning the conditions of warranty. Warranty cover extends at least to that granted by the legal warranty in force in the country where the original purchase invoice was issued.

Vérifier en ligne les compatibilités et les consignes d'installation mises à jour.

Check Online Updated Compatibility list and installation manual.

www.focal-inside.com



Pour installer le produit Focal Inside, se référer aux vidéos d'installation et de montage disponibles en ligne.

To set up your Focal Inside product, please watch online the installation video.

www.focal.com/focal-inside/videos/

